


904

AMPLIFICADORES MULTIBANDA
MULTIBAND AMPLIFIERS
AMPLIFICATEURS MULTIBANDE

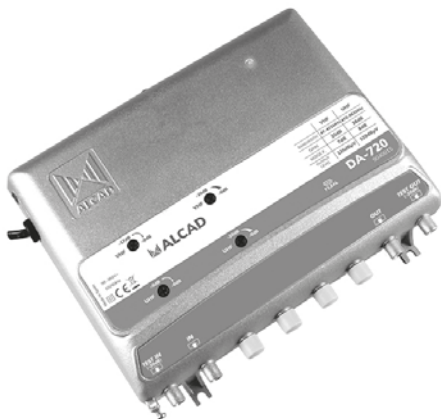

CÓDIGO-CODE-CODE		9040015	
MODELO-MODEL-MODELE		DA-720	
Rango de frecuencia Frequency range Gamme de frequences	Band MHz	VHF 47-422	UHF 470-862
Ganancia Gain Gain	dB	35 ± 1,0	36 ± 1,0
Regulación de ganancia Gain adjust Réglage de gain	dB	20	20
Ecualización fija Fixed equalization Pente fixe	dB	-	4
Margen de ecualización Adjustable equalization range Plage de réglage de pente	dB	17	8
Test de salida Output test point Sortie test	dB	30 ± 1,0	
Nivel de salida Output level Niveau de sortie	dB	120 (DIN 45004B) 117 (IMD ₃ -60 dB) 115 (IMD ₂ -60 dB) 104 (CTB -60 dB) 106 (CSO -60 dB) 102 (XMOD -60 dB)	
Pérdidas de retorno E/S Return loss I/O Pertes de retour E/S	dB	≥10	
Figura de ruido Noise figure Facteur de bruit	dB	≤7	≤8

DIN 45004B: 3 unequal carriers, IMD₃ at 60 dB
IMD₃ -60 dB: 2 equal carriers, EN 50083-3
IMD₂ -60 dB: 2 equal carriers, EN 50083-3


CTB -60 dB: 42 equal carriers, EN 50083-3
CSO -60 dB: 42 equal carriers, EN 50083-3
XMOD -60 dB: 42 equal carriers, EN 50083-3

CÓDIGO-CODE-CODE		9040015
MODELO-MODEL-MODELE		DA-720
Fusible	V~	250
Fuse	A	1,6 (Type F)
Fusible		
Tensión de red	V~	90-264 50/60 Hz
Mains voltage	W	11
Tension du secteur		
Temperatura de funcionamiento	°C	-20 ... +65
Operating temperature		
Température de fonctionnement		
Índice de protección		IP 50D
Protection index		
Indice de protection		

AMPLIFICADOR DA-720

AMPLIFIER DA-720


AMPLIFICATEUR DA-720

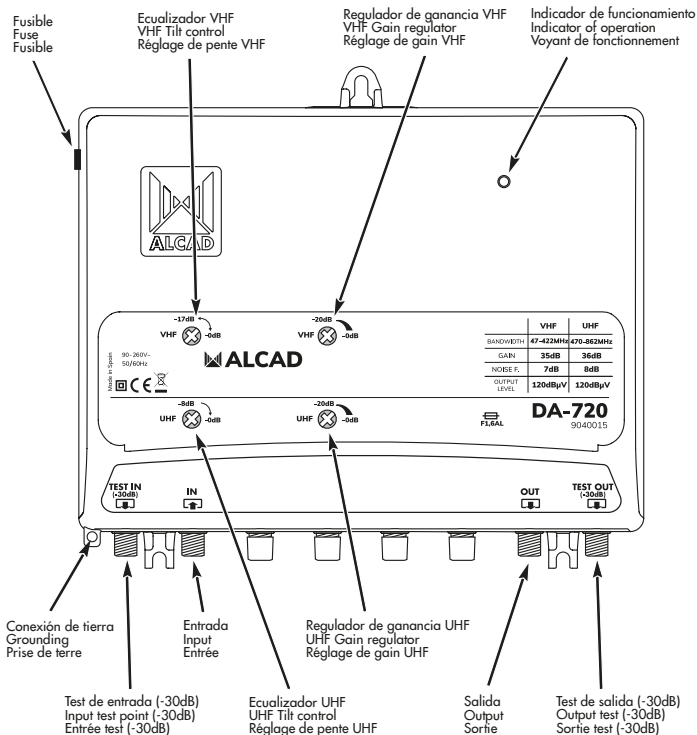

CÓMO ALIMENTAR EL AMPLIFICADOR

HOW TO FEED THE AMPLIFIER


COMMENT ALIMENTER L'AMPLIFICATEUR

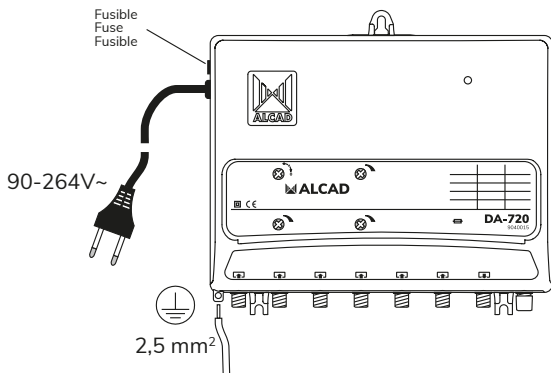

SUSTITUCIÓN DEL FUSIBLE


FUSE REPLACEMENT

REPLACEMENT DU FUSIBLE

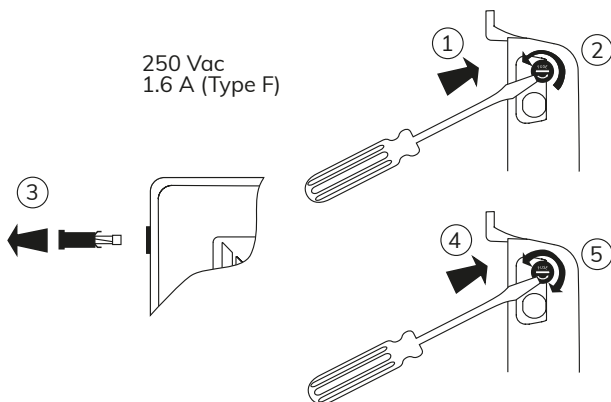

ESQUEMAS TÍPICOS CONNECTION DIAGRAMS SCHEMAS DE CONEXION

10 Channels	47..862 MHz
20 Channels	47..862 MHz

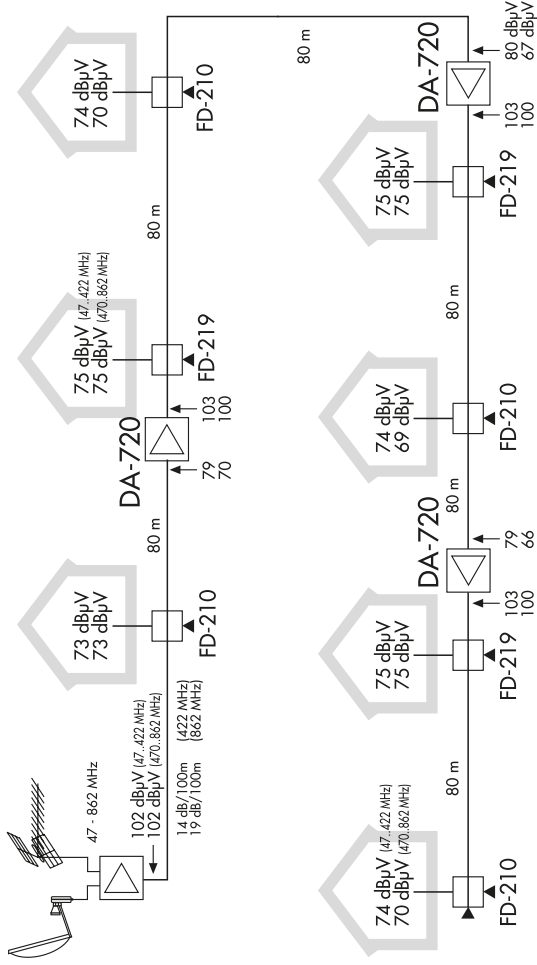

ESQUEMAS TÍPICOS
CONNECTION DIAGRAMS
SCHEMAS DE CONNEXION

10 Channels	47.862 MHz
20 Channels	47.862 MHz

