

904

AMPLIFICADOR MULTIBANDA TV-SAT
MULTIBAND SAT-TV AMPLIFIER
AMPLIFICATEUR MULTIBANDE TV-SAT



CÓDIGO-CODE-CODE		9040128					
MODELO-MODEL-MODELE		CA-750					
Número de entradas/salidas Number of inputs/outputs Nombre d'entrées/sorties		6 / 1					
Ganancia Gain Gain	Band	BI/FM	BIII/DAB	UHF1	UHF2	UHF3	SAT
	MHz	47-108	160-254	470 -790			950-2150
	Filter			LTE800			
	dB ± TOL	41 ± 2,0		51 ± 2,0			42 ± 2,0
Regulación de ganancia Gain adjustment Réglage de gain	dB	20					
Ecualización fija Fixed equalization Pente fixe	dB	-					5
Margen de ecualización Adjustable equalization range Plage de réglage de pente	dB	-					7
Nivel de salida Output level Niveau de sortie	dBµV	122 DIN 45004B 119 (IMD ₃ -60 dB) 112 (IMD ₂ -60 dB)					120 (IMD ₃ -35 dB) 110 (IMD ₂ -60 dB)
Figura de ruido Noise figure Facteur de bruit	dB	10 ± 1,0		9 ± 1,0			10 ± 1,0
Tensión de salida Output voltage Tension de sortie	Vdc	24 Auto					13 / 18
	mA	60					350
	Tone						0/22 KHz
Tensión de red Mains voltage Tension du secteur	Vac	230 ±15% 50/60 Hz					
	W	13					
Temperatura de funcionamiento Operating temperature Température de fonctionnement	°C	-10..+65					
Índice de protección Protection index Indice de protection		IP 50D					

DIN 45004B: 3 unequal carriers, IMD₃ at 60 dB
IMD₃ -60 dB: 2 equal carriers, EN 60728-5
IMD₂ -60 dB: 2 equal carriers, EN 60728-5


IMD₃ -35 dB: 2 equal carriers, EN 60728-5
IMD₂ -35 dB: 2 equal carriers, EN 60728-5

Data published in compliance with the definitions and measurement methods of the following standards: EN 60728-3, EN 60728-4 and EN 60728-5

AMPLIFICADOR CA-750

AMPLIFIER CA-750

AMPLIFICATEUR CA-750

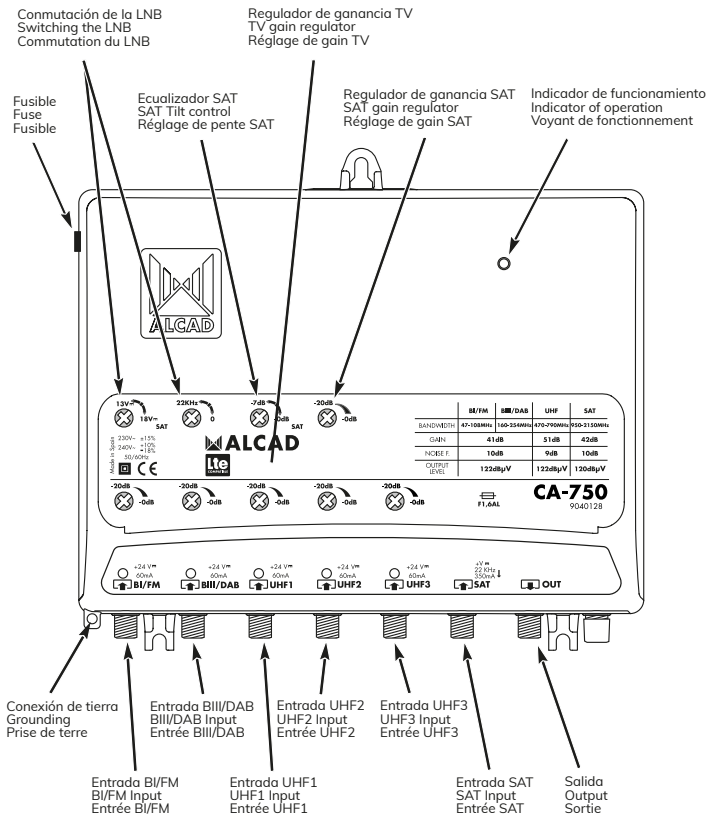


REDUCCIÓN DEL NIVEL DE SALIDA
REDUCTION OF THE OUTPUT LEVEL
REDUCTION DU NIVEAU DE SORTIE

	NIVEL DE SALIDA / OUTPUT LEVEL / NIVEAU DE SORTIE											
Canales Channels Canaux		2	3	4	5	6	7	8	9	10	11	12
Nivel máximo TV Maximum TV level Niveau maximum TV	dB μ V	122	119	118	117	116	116	115	115	114	114	114
Nivel máximo SAT Maximum SAT level Niveau maximum SAT	dB μ V	120	117	116	115	114	114	113	113	112	112	112


DIN 45004B

CÓMO ALIMENTAR EL AMPLIFICADOR
HOW TO FEED THE AMPLIFIER
COMMENT ALIMENTER L'AMPLIFICATEUR

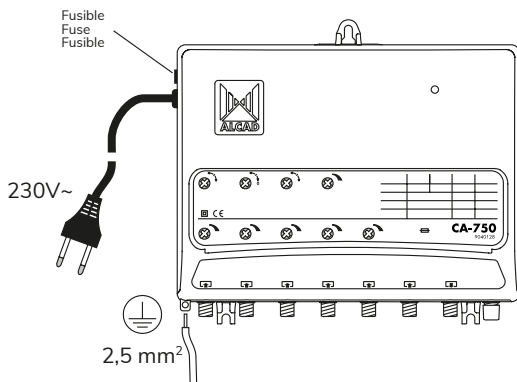


SUSTITUCIÓN DEL FUSIBLE FUSE REPLACEMENT REPLACEMENT DU FUSIBLE

250 Vac
1.6 A (Type F)

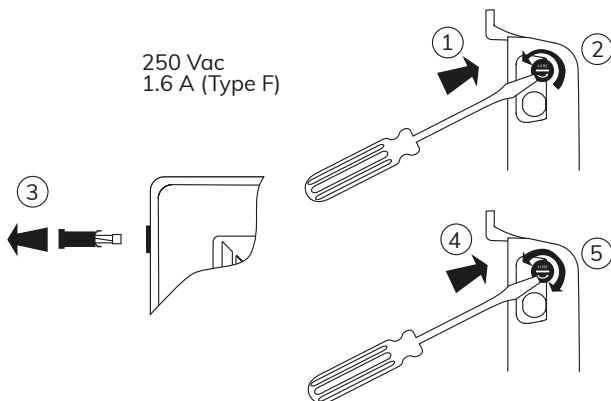

RESPUESTA EN FRECUENCIA DEL AMPLIFICADOR FREQUENCY RESPONSE OF THE AMPLIFIER RÉPONSE EN FRÉQUENCE DU AMPLIFICATEUR

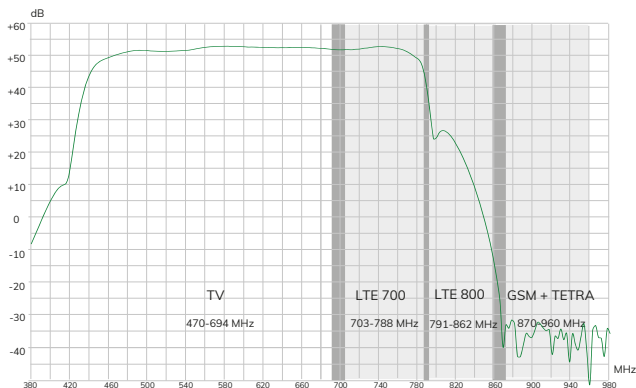


CÓMO ALIMENTAR PREAMPLIFICADORES Y LA LNB

HOW TO FEED PREAMPLIFIERS AND THE LNB

COMMENT ALIMENTER DES PREAMPLIFICATEURS ET LA LNB

Control Control Contrôle	HOR LOW	VER LOW	VER HIGH	HOR HIGH
V $\cdots$	18	13	13	18
22 KHz	OFF	OFF	ON	ON

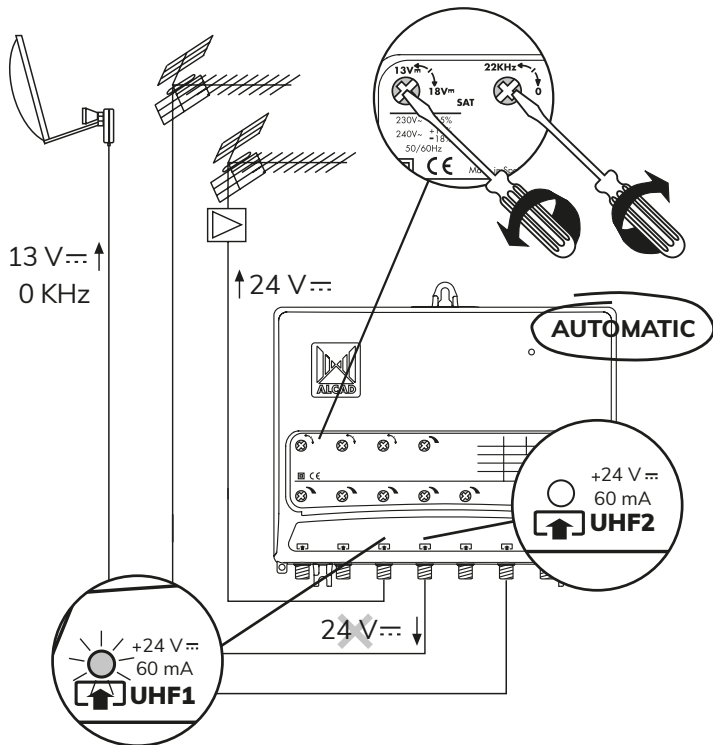

ESQUEMA TÍPICO
CONNECTION DIAGRAM
SCHEMA DE CONNEXION

